


STURDY Animal Surrogate Feeder

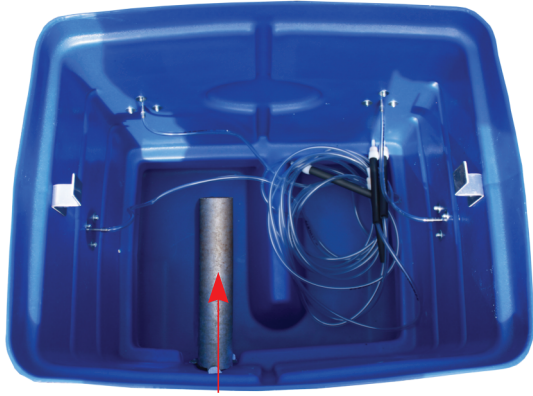

**Heating Element
Inside**



**Insulated
Base**



Fill Water to this level
and Check Daily.

- Do not plug the unit in without the element being covered with water (see water fill line below).
- Ensure that rubber feeding tubes are immersed in the water
- Do not allow these rubber feeding tubes to come in contact with the element cover at any time during operation.
- Ensure that the clear rubber feeding tubes are protected from the heating element by Insulated Base provided.
- Ensure that the element is covered by water at all times. Failure to do so will cause the element to burn out and nullifies any guarantee.
- The heating element has been pre-set at 30-35 degrees celcius,so you should never have the need to tamper with the element.
- Never remove outer external element cover while unit is plugged in.



- The Feed/Milk is to be placed in the container provided. Capacity of up to 40L.
- Allow the water to get up to temperature before allowing animals to feed.
- Ensure that the tubes with the non-return valves are immersed in the milk or feed.
- As the animals suckle the teat, the milk or feed is drawn from the internal container and passes through the heated water where it is heated to the correct temperature.